


FAIL-SECURE / FAIL-SAFE MODE CHANGE - ARU-M

The ARU & ARU-M is supplied in **fail-secure** mode. To change the mode to **fail-safe** is relatively easy, following the steps below:

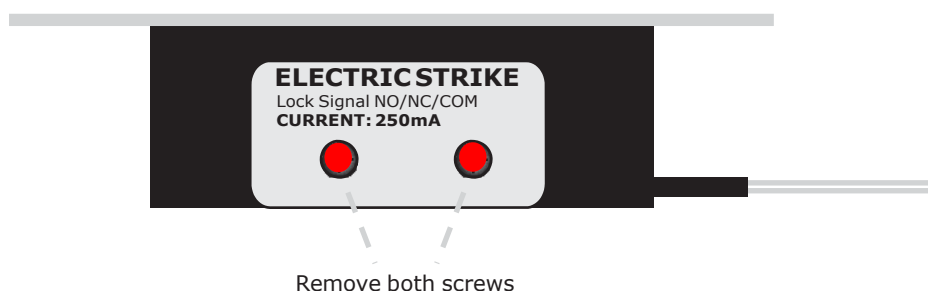

Once the screws have been removed, you will see the two threaded holes on the backplate where the screws were located. To the left of these holes are two more threaded holes, and these need to be lined up to accept the screws being re-fitted.

