

GMT Easy-Vu Quick Programming Guide

Download and Register the APP:

1. Open your APP store and search for 'Acebell' or scan the QR code on the side of the box
2. Open the APP and click on 'register'
3. In the 'account' box enter your e-mail address
4. Enter a password (this will be needed again so use one that you remember)
5. Click on 'Verify code' and check your emails
6. Enter the code e-mailed into the 'Code' section of the 'Acebell' APP
7. Tick the 'I have read' box
8. Click on 'sign up'

Connecting to the Easy-Vu:

1. Plug the 'Gateway' into your broadband with the ethernet cable provided
2. Power up the 'Gateway' with the power cable provided
3. Remove the battery from the 'video intercom'
4. Remove the cover from the battery terminals
5. Re insert the battery
6. Open the APP 'Acebell'
7. Click on 'Click here to add device'
8. Click 'QRcode paired'
9. Click on the QR code picture to open the camera
10. Scan the QR code on the back of the 'gateway' black box

The system is now ready for use.

The gate relay should be paired and ready to use out of the box.

Pairing the Gate Relay Module:

1. Apply 12vDC only to the + - terminals of the gate module
2. Open the APP and click on the image for your video intercom
3. Press and hold the button on the gate relay until the red LED flashes rapidly
4. Click on the 'Padlock' symbol on the app
5. Enter the default unlock code of 0000 (4x Zero's)
6. Click 'OK'
7. Gate relay is now paired and will be shown by a solid red light

Each short press of the button on the gate relay will change the relay time in seconds, as indicated by the red LED number of flashes. Options are 1, 3, 5 or 8 seconds.



Gate Relay Module



Gateway