

ART. 3176

3000 Series full base "2 wire BUS" digital audiophone which incorporates an electronic call tone with an adjustable 3 level volume control. It also includes a "door open" push button with a " door open" LED and privacy button with privacy ON illumination LED.

For use on the VX2200 digital audio and video systems.

Call tone adjustment: 3 level (low, medium and high) call tone switch.

Privacy button: 1 privacy button (timed).

Privacy adjustments: 1 internal 3 way dip-switch to set the privacy time.

Privacy indication: 1 privacy illumination LED (red).

Door open indication: 1 door open illumination LED (green).



3176
3000 Series Audiophone
QUICK GUIDE



TECHNICAL SUPPORT
 Tel: 0191 224 3174
 Fax: 0191 224 4938
 Email: tech@videxuk.com
 Web: www.videxuk.com


05_3176_V1.0_08/17




ANSWERING A CALL

beep!
beep!


During a call

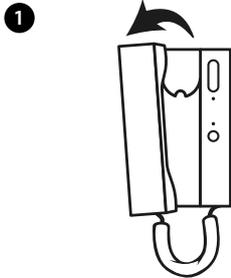

1 To answer an incoming call pick up the handset.

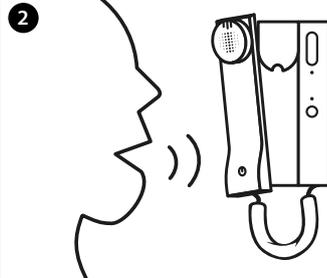


2 With the handset lifted a conversation with the caller can begin.

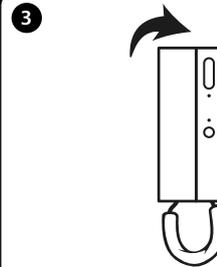


3 To end the call replace the handset back on the cradle.

TO OPEN THE DOOR

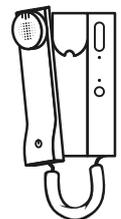


During a conversation

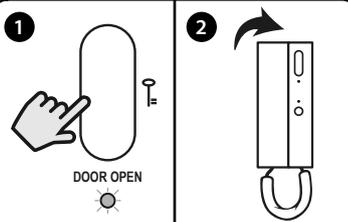


1 During a conversation, with the handset lifted, press the lock button  to operate the lock. The door open LED will illuminate. To end the call replace the handset back on the cradle.

CALL TONE VOLUME ADJUSTMENT

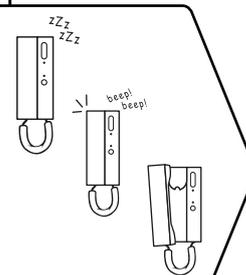

In every situation

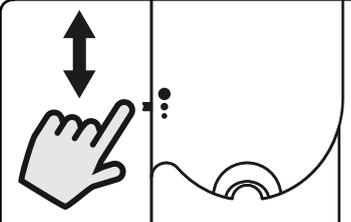


Move the volume switch to the lower position to set the call tone volume to low, to the middle position to set the call tone volume to medium and to the upper position to set the call tone volume to high.


MAKING A CALL TO THE CONCIERGE

ZZZ
ZZZ


In standby

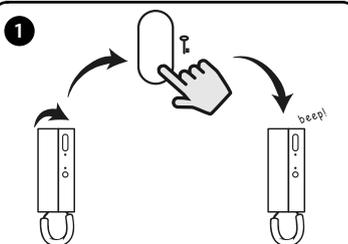

1 With the handset on the cradle press the lock button  once. The phone will emit a beep, to indicate a call has been placed to the concierge.

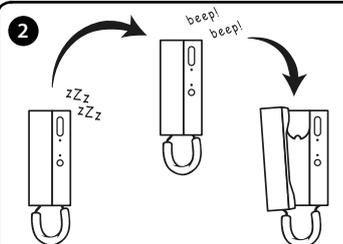

2 Wait for the callback from the concierge. After a brief delay the phone will ring. When the phone rings pick up the handset to answer the call.

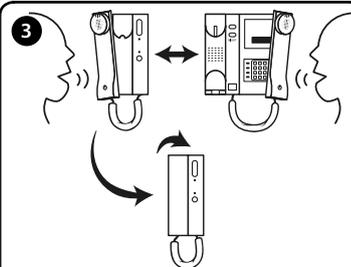


3 A conversation can begin between the phone and concierge. When the conversation is finished replace the handset back on the cradle.

OPERATING THE PRIVACY BUTTON


ZZZ
ZZZ

In standby

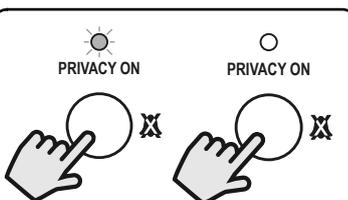

To activate privacy (switch the phone OFF) press the privacy button. The privacy LED will switch ON. The phone will automatically switch ON after the privacy duration time has expired or to manually switch the phone ON, press the privacy button.

TECHNICAL ADVICE

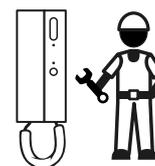

For further technical advice and assistance on the installation of this product please contact Videx technical on tel: 0191 224 3174.

For any sales advice and assistance please contact Videx sales on tel: 0191 238 8324.

To download a copy of this quick guide visit the Videx website: www.videxuk.com