 


6200
SERIES

Art. 6296

IP videophone

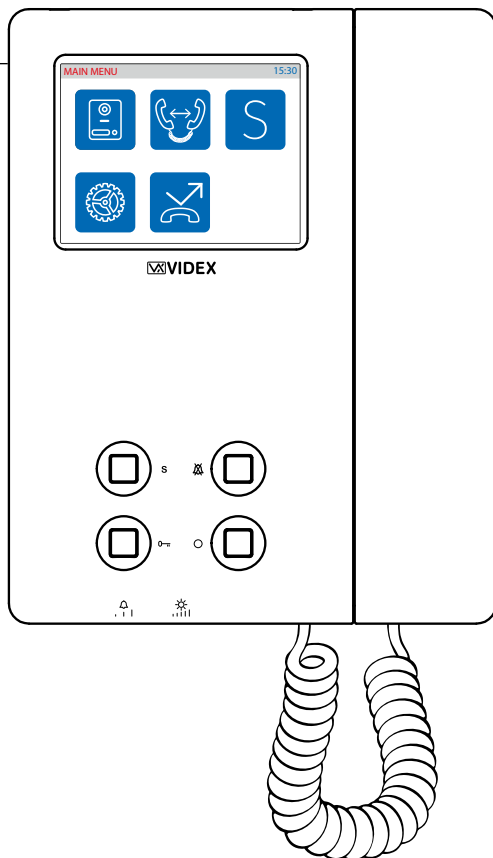 


ENG Quick guide


 **VIDEX**[®]
THE POWER TO SECURE

Overview and button operations


OVERVIEW

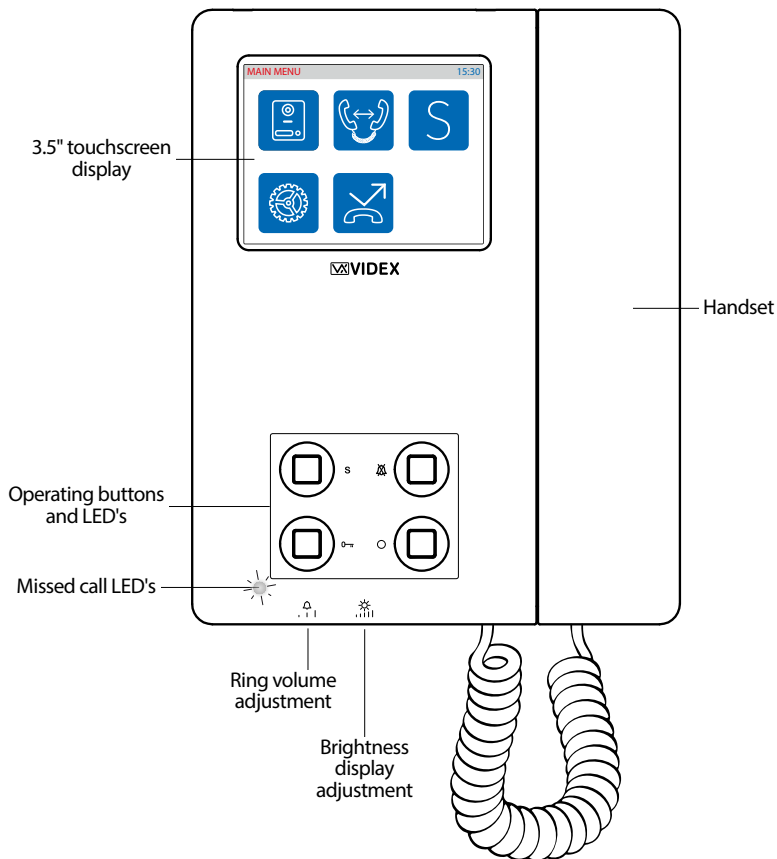

ANSWERING A CALL

   
 
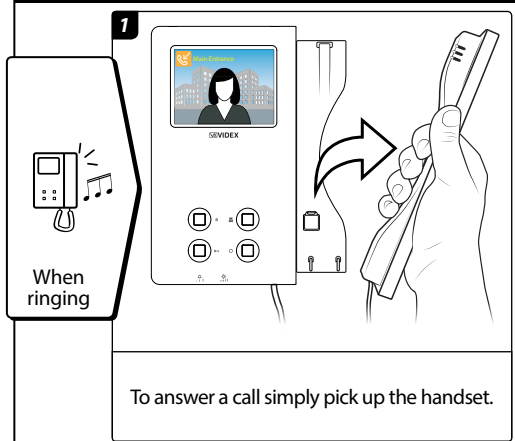 

 


OPEN THE DOOR

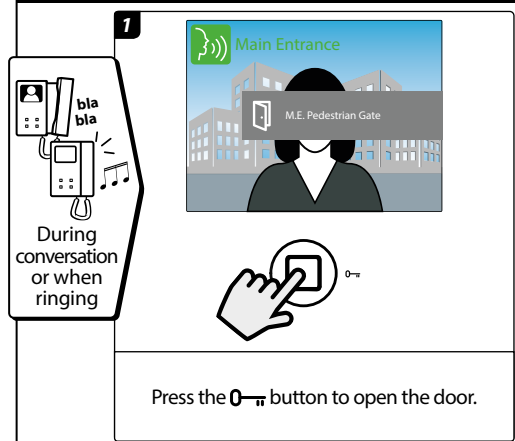


Button operations

TO ENABLE/DISABLE PRIVACY SERVICE

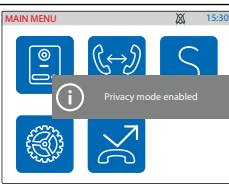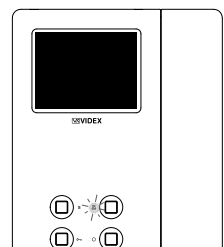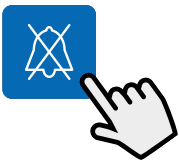
<p>1</p>  <p>During stand-by</p>	<p>TIP</p> 	<p>TIP</p> 
<p>Press  button to activate or deactivate the privacy service. The  LED will illuminate when the service is active.</p>	<p>During an incoming call, with the service is enabled, the device does not emit any acoustic signal.</p>	<p>To set privacy duration, please see "Set Privacy duration" on page 10.</p>

REJECT A CALL

 

1

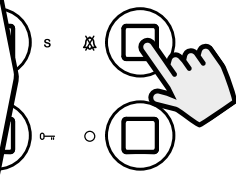

When ringing


Press  button to reject a call.

 SERVICE BUTTON

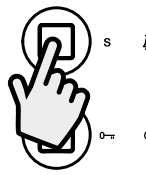
<p>1</p>  <p>During stand-by or conversation</p>	<p>TIP</p> 
<p>Press the S button to activate the favourite service (if set). By default this button is disabled.</p>	<p>To enable this button for services to activate in stand-by mode or during a conversation, please contact the installer.</p>

RING VOLUME ADJUSTMENT

 1

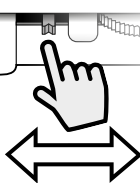


In all situations


Move the switch, under the  symbol, to the left for a lower volume, to the center for a medium volume and to the right for a higher volume.

BRIGHTNESS DISPLAY ADJUSTMENT

 1

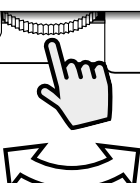


In all situations

Turn the roller under the  symbol to the left to reduce and to the right to increase the brightness.

Button operations

CAMERA RECALL TO FAVORITE DOOR PANEL

 
1

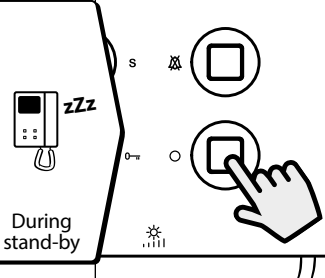

During stand-by


Press the O button.

 WARNING!

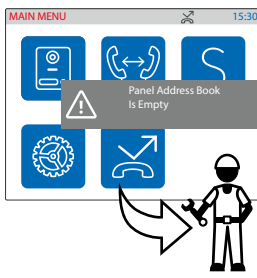


If the "Panel address book" is empty a warning is shown. To add recall please contact the installer.

 2

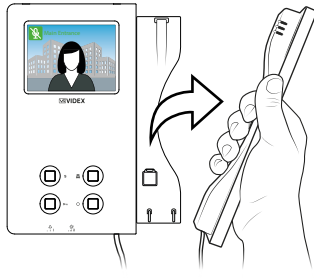


Pick up the handset. The display shows the video from the door panel.

 3

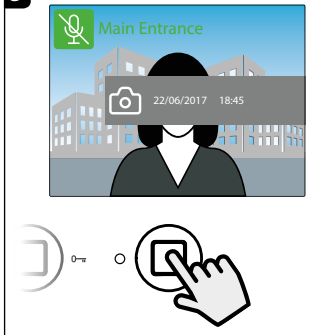


To screen shot press O momentarily.

 4

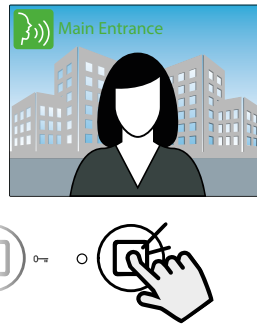


To enable the speech and start a conversation press and keep pressed the O button until the display shows the))) symbol.

 5

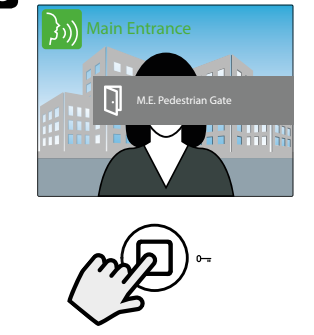


To open the door press the O button.

 6

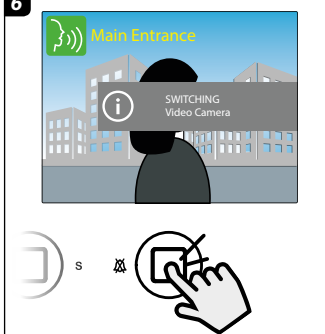

To switch to another video source (if enabled), press and keep pressed the X button until the display shows the camera switch notice.





 
6

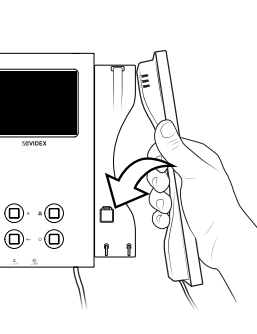

To close the connection hang up the handset.



Button operations

       INTERCOMMUNICATING WITH FAVORITE INDOOR STATION

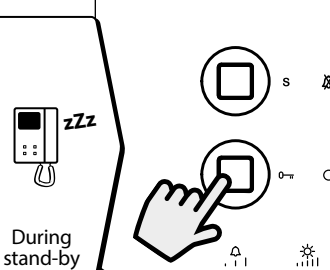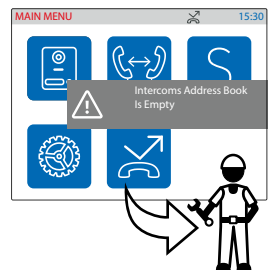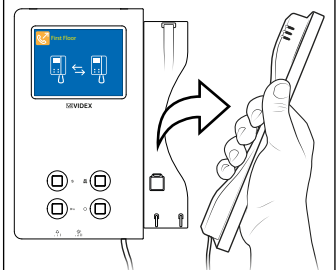 
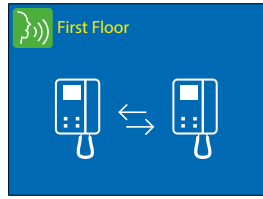 
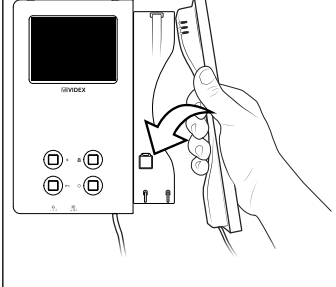 

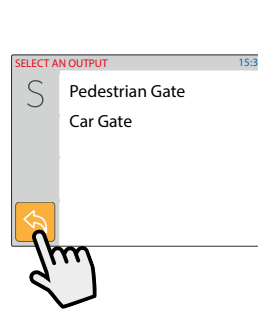 
<div data-bbox="43 102 384 438"><p>1</p><p>During stand-by</p></div> <div data-bbox="43 438 384 571"><p>Press the 0-π button.</p></div>	<div data-bbox="384 102 735 438"><p>WARNING!</p></div> <div data-bbox="384 438 735 571"><p>If the "Intercom address book" is empty a warning is shown. To add intercommunication please contact the installer.</p></div>	<div data-bbox="735 102 1081 438"><p>2</p></div> <div data-bbox="735 438 1081 571"><p>Pick up the handset and wait for the other party to answer.</p></div>
<div data-bbox="43 571 384 933"></div> <div data-bbox="43 933 384 1045"><p>When the preferred videophone answers you can talk with them. The display shows the }))) symbol.</p></div>	<div data-bbox="384 571 735 933"></div> <div data-bbox="384 933 735 1045"><p>To close the connection hang up the handset.</p></div>	

Main menu touch screen operations

ENTER MAIN MENU

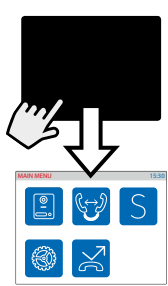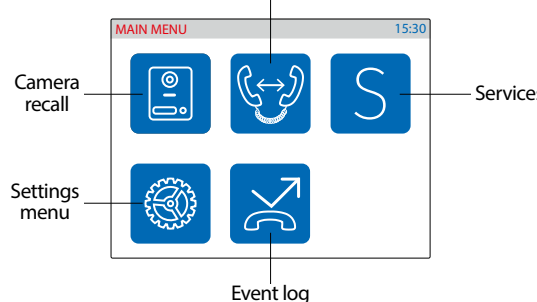 


 
 
 
 


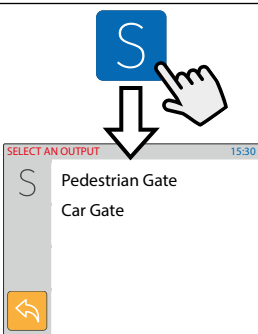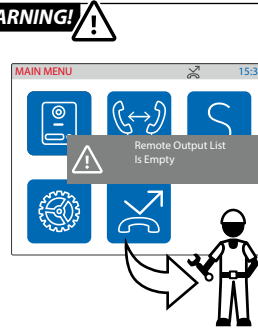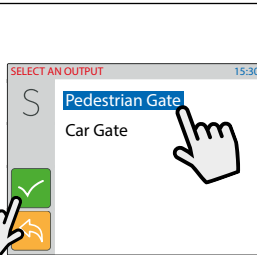



 

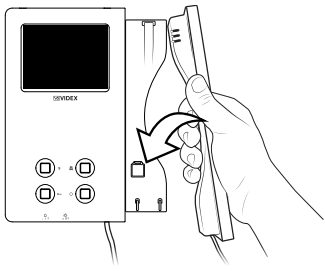 
<p>1</p>  <p>During stand-by</p> <p>Tap the black screen.</p>	<p>2</p>  <p>Intercommunicating</p> <p>Camera recall</p> <p>Services</p> <p>Settings menu</p> <p>Event log</p> <p>Main menu will appear.</p>
---	--

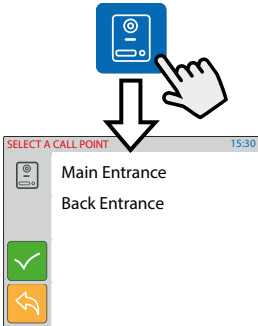ACTIVATION OF SERVICES
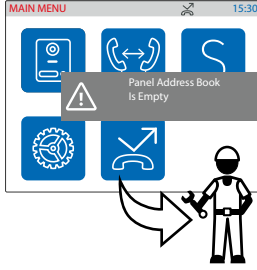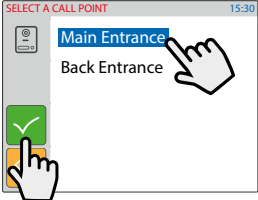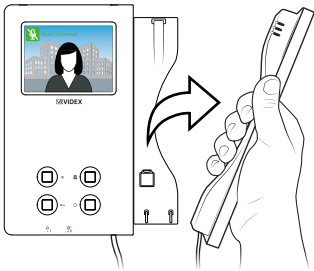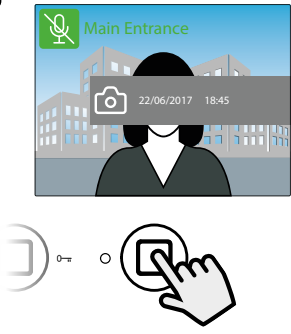
<p>1</p>  <p>Tap S</p>	<p>WARNING!</p>  <p>If the "Remote outputs list" a warning will be shown. Contact the installer to add services.</p>	<p>2</p>  <p>Select the service to activate then tap ✓ to activate it.</p>
<p>3</p>  <p>A notice will appear to confirm the activation.</p>	<p>4</p>  <p>Active another service or tap ↶ to go back to the main menu.</p>	



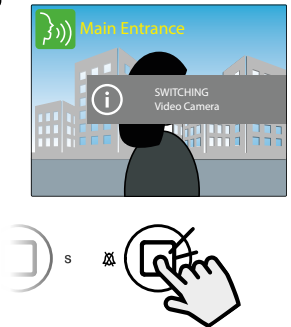

 

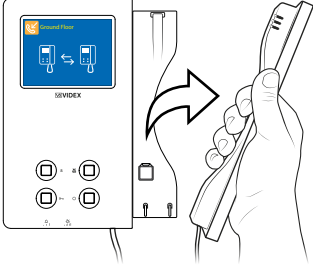 
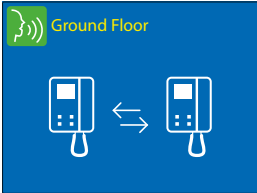 
 
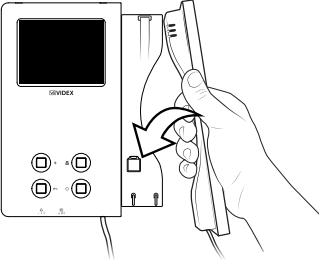 
Main menu touch screen operations

CAMERA RECALL A DOOR PANEL FROM THE PANEL ADDRESS BOOK

<p>1</p>  <p>Tap </p>	<p>WARNING! </p>  <p>If the "Panel address book" is empty a warning is shown. Contact the installer to add camera recall.</p>	<p>2</p>  <p>Select the door panel to connect to then tap ✓ to open the communication.</p>
<p>3</p>  <p>Pick up the handset. The display shows the video coming from the door panel.</p>	<p>4</p>  <p>To take a screen shot press  button momentarily.</p>	<p>5</p>  <p>To enable the speech and start a conversation press and keep pressed the  button until the display shows the  symbol.</p>
<p>6</p>  <p>To open the door press the  button.</p>	<p>7</p>  <p>To switch to another video source (if enabled), press and keep pressed the  button until the display shows the camera switch notice.</p>	<p>8</p>  <p>To close the connection hang up the handset.</p>

Main menu touch screen operations


INTERCOMMUNICATING WITH AN INDOOR STATION FROM ADDRESS BOOK
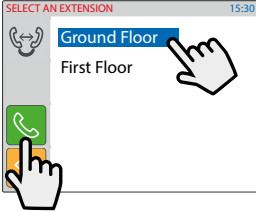
<div>1</div> <div></div> <div>Tap </div>	<div>WARNING! </div> <div></div> <div>If the "Intercom address book" is empty a warning is shown. Contact the installer to add intercommunication.</div>	<div>2</div> <div></div> <div>Select the indoor station to call then tap  to open the communication.</div>
<div>3</div> <div></div> <div>Pick up the handset and wait for the other party to answer.</div>	<div>4</div> <div></div> <div>When the called videophone answers you can talk with them. The display shows the  symbol.</div>	<div>5</div> <div></div> <div>To close the connection hang up the handset.</div>

Main menu touch screen operations


VIEW THE EVENT LOG

 1

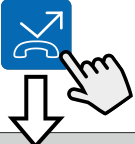


EVENT LOG 15:30

10:00	21/06/2017
12:30	22/06/2017
15:00	22/06/2017
15:18	22/06/2017
16:00	22/06/2017
18:45	22/06/2017

Tap 

2




EVENT LOG 15:30

10:00	21/06/2017
12:30	22/06/2017
15:00	22/06/2017
15:18	22/06/2017
16:00	22/06/2017
18:45	22/06/2017


Tap the event you want to inspect:
Red: missed call
Green: incoming call answered
Blue: outgoing call

3




EVENT LOG 15:30

10:00	21/06/2017
12:30	22/06/2017
15:00	22/06/2017
15:18	22/06/2017
16:00	22/06/2017
18:45	22/06/2017

To see a screen shot, keep pressed 



4




EVENT LOG 15:30

10:00	21/06/2017
12:30	22/06/2017
15:00	22/06/2017
15:18	22/06/2017
16:00	22/06/2017
18:45	22/06/2017

  Main Entrance

To start a camera recall, tap an event with  icon, then tap 


 
5




EVENT LOG 15:30

10:00	21/06/2017
12:30	22/06/2017
15:00	22/06/2017
15:18	22/06/2017
16:00	22/06/2017
18:45	22/06/2017

First Floor


To start an intercommunicating call, tap an event with  icon, then tap 

6




EVENT LOG 15:30

10:00	21/06/2017
12:30	22/06/2017
15:00	22/06/2017
15:18	22/06/2017
16:00	22/06/2017
18:45	22/06/2017


Tap  to go back to main menu.

ACCESS TO SETTINGS MENU

 1

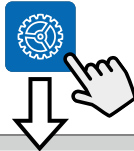


SETTINGS MENU 15:30


Tap  to enter the settings menu.

Settings menu - Programmable settings

ENTER AND NAVIGATE SETTINGS MENU

 1

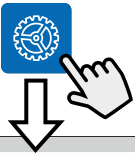

From main menu tap 

2

Melody

SETTINGS MENU 15:30

Privacy duration

Number of rings

Date & time

Go back to main menu

More settings

For more settings tap ↓
To go back to main menu tap ↶

3

Video quality

Speech quality


Binding code

 
Info


Go back to previous page

Go back to main menu

To go make to previous page tap ↑
To go back to main menu tap ↶


TIP 

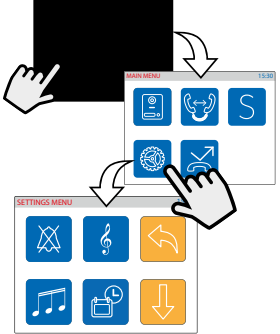


If the screen is black, tap it to see main menu then tap  to open settings.


SET PRIVACY DURATION

 1

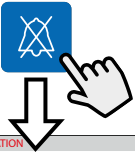


Tap 
The current value is shown.

 2

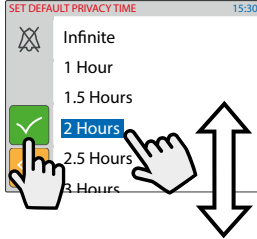

Swipe among the values to select the required then tap ✓ to confirm.

 3


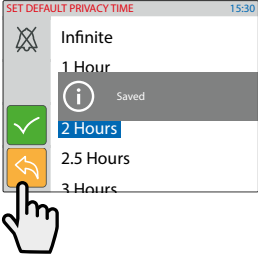



A notice will inform that the value is saved. Tap ↶ to go back.

Settings menu - Programmable settings


SET MELODY

  
1

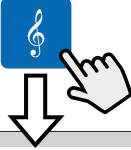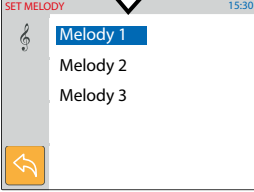
Tap 
The current melody is shown.

 
2

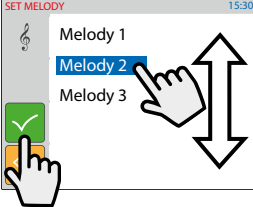

Tap on a melody to listen to it then tap  to confirm the selected melody.


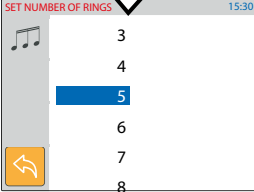 
3




A notice will inform that the value is saved.
Tap  to go back.

 
SET THE NUMBERS OF THE RINGS


1


Tap 
The current value is shown.


2

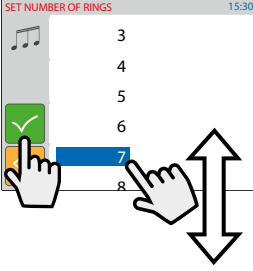

Swipe among the values to select the required then tap  to confirm.


 
3

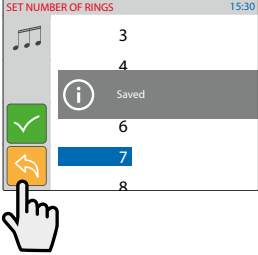


A notice will inform that the value is saved.
Tap  to go back.


SET DATE & TIME

  
1

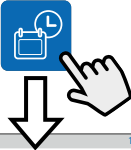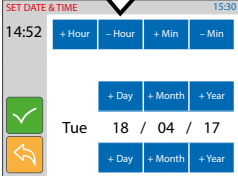
Tap 
The current date & time are shown.

 
2

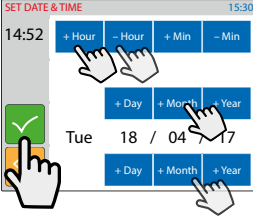

 Use the buttons to adjust the date & time required then tap  to confirm.

3

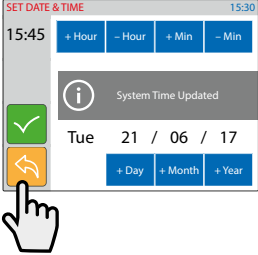 
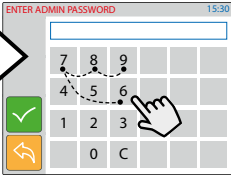 



A notice will inform that the values are saved.
Tap  to go back.

Settings menu - Adjustable settings

 
ADJUST OUTDOOR STATION SPEECH QUALITY

1


Tap 
Enter the default password **9876**.

2

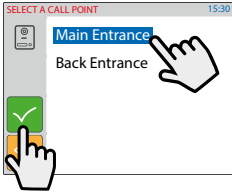


Select the door panel to connect to then tap ✓ to open the communication.

 3

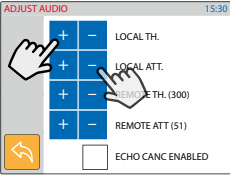


Adjust the speech using the + and - buttons.

 4

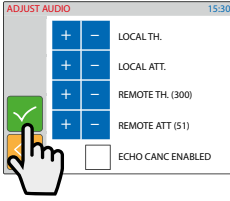

Tap ✓ to confirm.

 
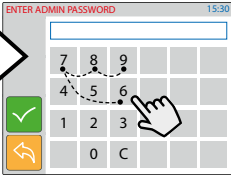 
5

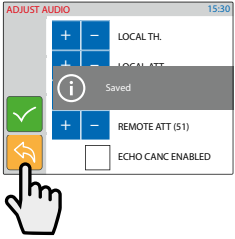


A notice will inform that the adjustment is saved.
Tap ↶ to go back.

 
ADJUST OUTDOOR STATION VIDEO QUALITY

1


Tap 
Enter the default password **9876**.

2

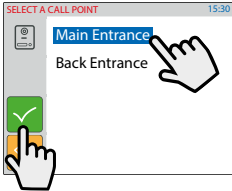


Select the door panel to connect then tap ✓ to open the communication.

 3

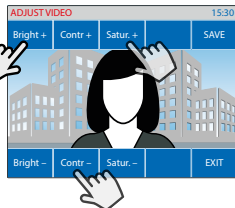


Adjust the video using the + and - buttons.

 4

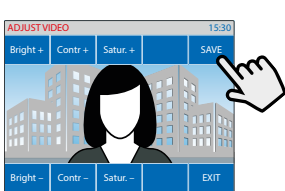

Tap **SAVE** to confirm.

 
5

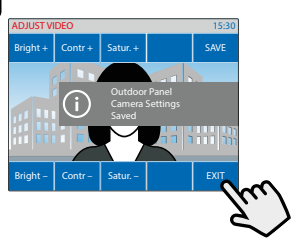


A notice will inform that the adjustment is saved.
Tap **EXIT** to go back.

Settings menu - Adjustable settings

 
BINDING MODE

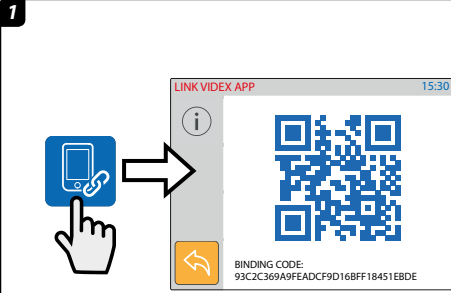

 
Tap .
The screen will show the "BINDING CODE" QR code and text format.

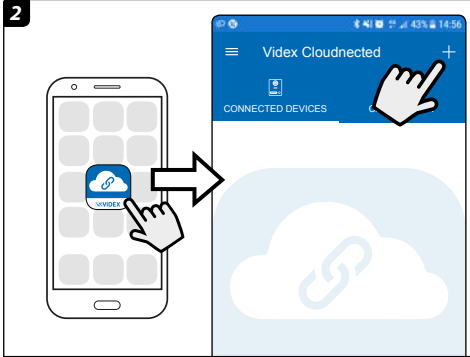

 Open the Videx Cloudconnected app on your smartphone and tap on the + symbol in the top right corner.

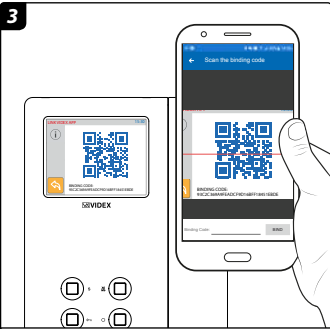

 Focus on the QR code or enter the text code.

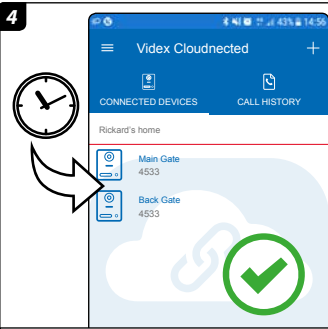

After a while, if the binding is successful, the main screen of the app will list the installation to which the videophone is connected. Now the app is ready to use.

 


GET IT ON
Google Play



Get Videx Cloudconnected on Google Play store.
Available for Android devices.
IOS version isn't available at the moment.

GET DEVICE INFO

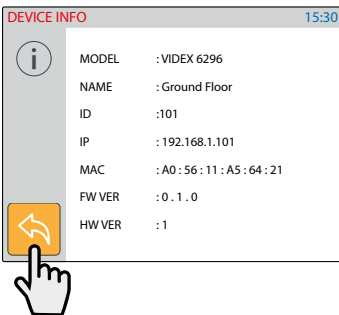

Tap to get device info.
Press to go back.

Note

Note

Manufacturer
Fabbricante
Fabricant
Fabricante
Fabrikant



THE POWER TO SECURE



Cert. N.11051217

made in
ITALY

VIDEX ELECTRONICS S.P.A.

Via del Lavoro, 1
63846 Monte Giberto (FM) Italy
Tel (+39) 0734 631669 - Fax (+39) 0734 632475
www.videx.it - info@videx.it

Customer support
Supporto clienti
Supports clients
Atención al cliente
Klantendienst

VIDEX ELECTRONICS S.P.A.

www.videx.it - technical@videx.it
Tel: +39 0734-631669
Fax: +39 0734-632475

UK Customers only:

VIDEX SECURITY LTD

www.videxuk.com
Tech Line: 0191 224 3174
Fax: 0191 224 1559



The product is CE marked demonstrating its conformity and is for distribution within all member states of the EU with no restrictions. This product follows the provisions of the European Directives 2014/30/EU (EMC); 2014/35/EU (LVD); 2011/65/EU (RoHS): CE marking 93/68/EEC.

Le produit est marqué CE à preuve de sa conformité et peut être distribué librement à l'intérieur des pays membres de l'union européenne UE.
Ce produit est conforme aux directives européennes 2014/30/EU (EMC); 2014/35/EU (LVD); 2011/65/EU (RoHS): marquage CE 93/68/EEC.

Het product heeft de CE-markering om de conformiteit ervan aan te tonen en is bestemd voor distributie binnen de lidstaten van de EU zonder beperkingen. Dit product volgt de bepalingen van de Europese Richtlijnen 2014/30/EU (EMC); 2014/35/EU (LVD); 2011/65/EU (RoHS): CE-markering 93/68/EEC.

Il prodotto è marchiato CE a dimostrazione della sua conformità e può essere distribuito liberamente all'interno dei paesi membri dell'Unione Europea UE. Questo prodotto è conforme alle direttive Europee: 2014/30/UE (EMC); 2014/35/UE (LVD); 2011/65/UE (RoHS): marcatura CE 93/68/EEC.

El producto lleva la marca CE que demuestra su conformidad y puede ser distribuido en todos los estados miembros de la unión europea UE. Este producto cumple con las Directivas Europeas 2014/30/UE (EMC); 2014/35/UE (LVD); 2011/65/UE (RoHS): marca CE 93/68/EEC.