



1) AUTOMATIC GATE OPENER

Wiring Connections

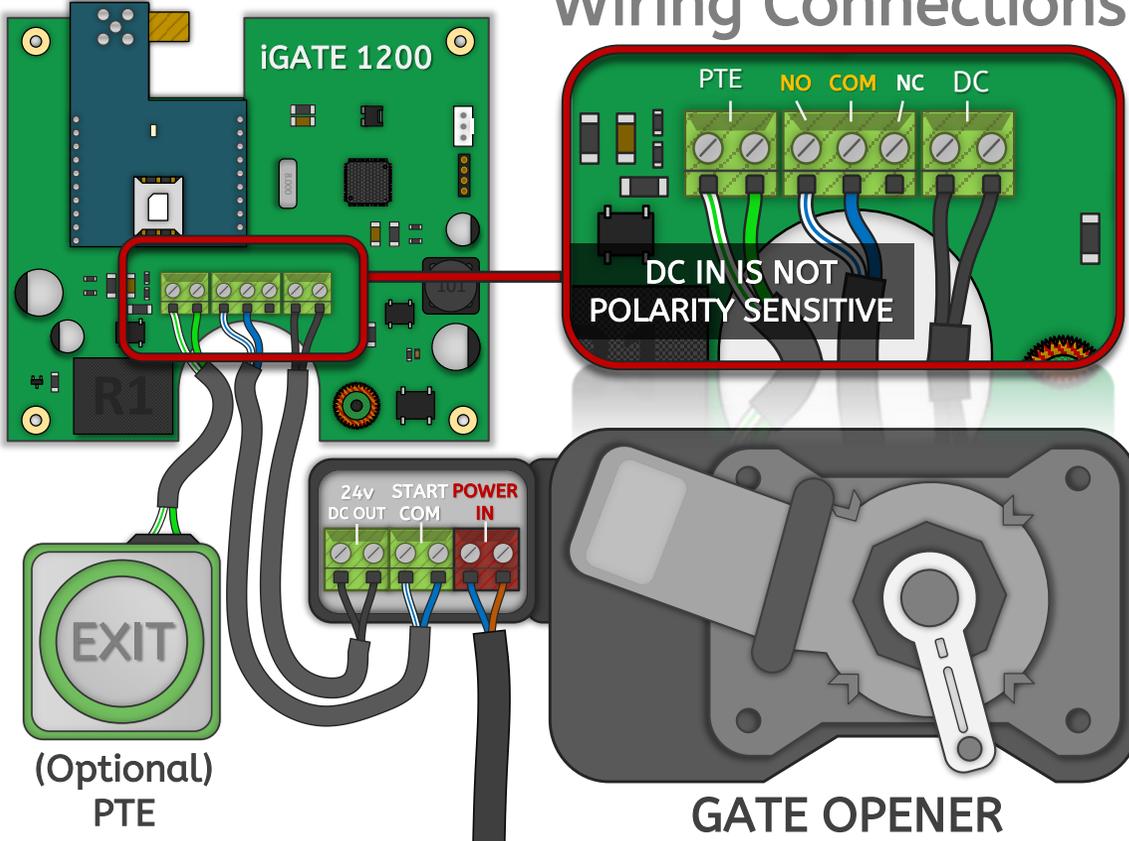


2) MAGNETIC LOCK (ALTERNATIVE WIRING DIAGRAM)

 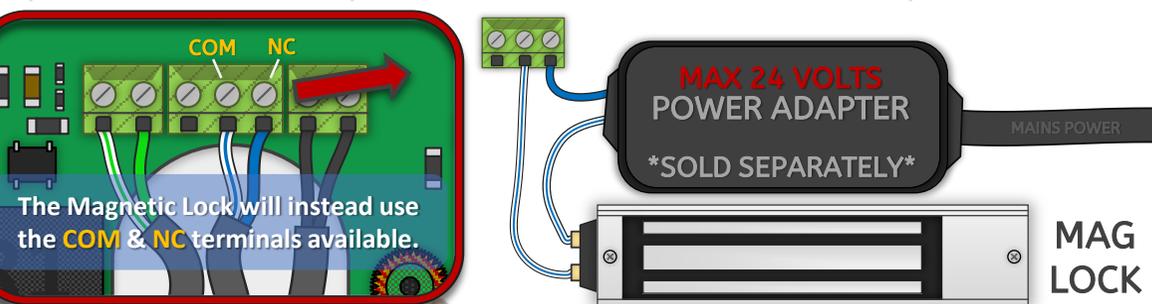


SIM ORIENTATION

ALWAYS ensure the system is switched **OFF** when adding or removing your SIM card and its orientation is correct.

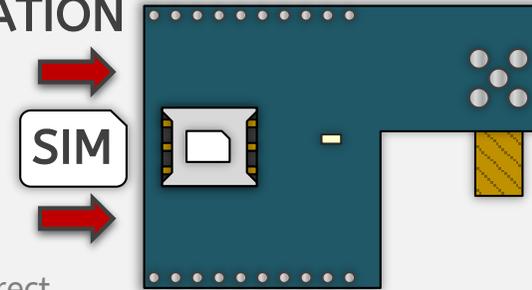

CONNECTION TO NETWORK



4G: Quick Flashing = **Standby** | Constant ON/OFF = **Searching**
2G: Slow Flashing = **Standby** | Quick Flashing = **Searching**

Commands	SMS Strings (no spaces)
Check Signal Level	*20#
Check Stored Numbers	*21#
Check Relay Status	*22#
Add Caller ID Number	9999#72TELNUMBER#
Delete Caller ID Number	9999#73TELNUMBER#
Delete ALL Caller ID Numbers	9999#73*#
Program Open Mode*	9999#75?# Default : 0 Enable : 1
Program Service Call Number*	9999#77TELNUMBER#
Trigger Relay	1234#1#
Latch Relay	1234#2#
Unlatch Relay	1234#3#
Change Programming Passcode	9999#01????# Default : 9999
Change Access Control Passcode	9999#02????# Default : 1234
Change Relay Time	9999#50?# ? = Time in seconds
Factory Reset to Default Setup	9999#999#

*Open Mode = Allow ANY number to open gate/door.

*Service Call Number = iGate will call this number every 30 days to avoid SIM card from being deactivated.