

Quick Start Guide



DC90SS - stand alone access control keypad

1 Initial setup

When powering up unit for the first time, wait 60 seconds or press **1 2 #** to stop the keypad beeping.

2 Entering Programming mode

Before you add or delete users, you must be in *Programming Mode*, to do this use default master code.

0 0 0 0 ** (Solid amber LED)

3 Changing Master Code

- Enter *Programming Mode* (see 2)
- Enter **"01"** for master code location
- Enter new 4 digit Master code

f. Press **"#"** to confirm

g. Press **"* *"** to finish programming

Example: 01 MASTER CODE # * *

4 Adding Cards (or tokens) only

- Enter *Programming Mode* (see 2)
- Enter **"10"** for output 1 relay
- Enter **"1"** for programming card only
- Press **"001"** to set token's location
- Present token to reader

f. Press **"#"** to confirm

g. Press **"* *"** to finish programming

Example: 10 1 001 READ TOKEN # * *

5 Adding PIN only

- Enter *Programming Mode* (see 2)
- Enter **"10"** for output 1 relay
- Enter **"2"** for programming PIN only
- Press **"001"** to set PIN's location
- Enter 4 digit user code

f. Press **"#"** to confirm

g. Press **"* *"** to finish programming

Example: 10 2 001 USER CODE # * *

6 Adding Card (token) + PIN

- Enter *Programming Mode* (see 2)
- Enter **"10"** for output 1 relay
- Enter **"3"** for programming PIN only
- Press **"001"** to set location
- Present token to reader
- Enter 4 digit user code

h. Press **"#"** to confirm

i. Press **"* *"** to finish programming

Example: 10 3 001 READ TOKEN USER CODE # * *

7 Setting the lock opening time

- Enter *Programming Mode* (see 2)
- Enter **"51"** for output 1 relay
- Enter number of seconds, **"5"** for 5 seconds

d. Press **"#"** to confirm

e. Press **"* *"** to finish programming

Example: 51 5 # * *