



### **Ali Latch: How to reverse the handing**

#### **Step 1:**




Remove the four screws, two on both sides.

#### **Step 2:**



Prise the back plate off, using a flat headed screwdriver.

#### **Step 3:**

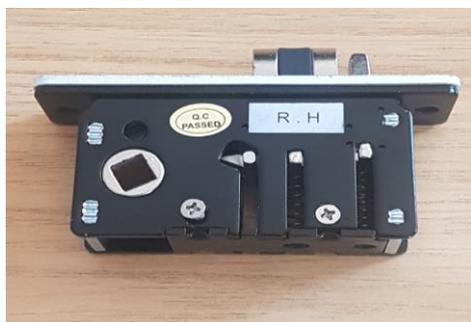

Remove the two coil springs.

**Step 4:**

Remove the latch bolt and anti-thrust pin.



**Step 5:**

Remove the pin on the latch bolt, using a screwdriver. Push on the smaller ended side in order to remove the pin completely. The latch tail piece should come loose.



**Step 6**

Flip the latch tail piece to the other side, being careful that the spring remains in place. Reinsert the pin that was previously removed.



**Step 7:**



Reinsert the anti-thrust pin and the latch bolt that as shown. Place the springs back in place where they were previously found, replace the back plate and reinsert the screws as needed.

