

e-DIAGNOSTIC

VERSION 3.0

Specifications

High-impact PC casing.
Silicone rubber cover.
IP 65 rated.
LCD backlight graphic display.
433.39 MHz bidirectional Transceiver.
Operates from 2 x 1.5V AAA batteries.
Transmitting power <10mW.



Activation and signal strength

1. Press the **MENU** button and you will see two selections, **Open RX** will be highlighted, press **SET** to select. You can now monitor the e-Loop activation.
2. When the trip level is exceeded, the screen will display the activation and the level that it tripped at for 2 seconds, to exit this mode just press the **MENU** button again.
3. To test for background interference, press the **MENU** button, now scroll using the down arrow until **Signal Strength** is displayed. Press **SET** to select or **MENU** to exit.
4. Low background noise is indicated as 1 to 2 bars, if you see more than 2 bars displayed constantly, you may have an interference problem.


This **Signal Strength** bar graph will also display the signal strength from our transmissions of remotes or e-Loops. Although this will only be a short burst, it can be quite useful in determining signal strength at the receiver end.

Product: E-DIAGNOSTIC



Connecting to an e-Loop

1. Hold the remote close to the e-Loop and press the **CONNECT** button. If pairing is successful, **Pair Success** will display, and the red LED will illuminate on the e-Loop. If not successful, the screen will display **Timeout**.
2. Now press the **MENU** button. **Diagnostics** will be highlighted, press the **SET** button to select.
3. The screen will display the magnetic field:
Reading – This should be sitting between **0-200** when no vehicle is present.
Trip Value – This is the level the reading needs to reach in order to trigger the e-Loop.
Temperature – this is the ambient temperature of the e-Loop.
4. You can test the e-Loop on the bench by moving a magnetic screwdriver close to the e-Loop. You will see the reading value increase until it trips and sends an open command.
5. To disconnect the e-Loop press the **CONNECT** button.

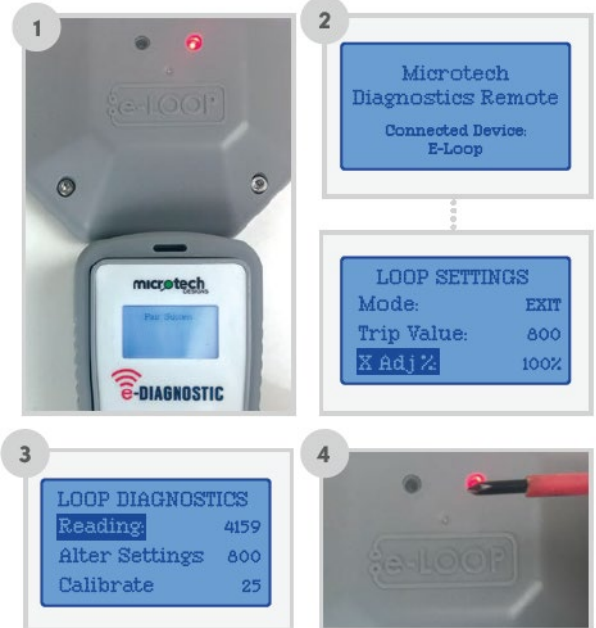

Connecting to a **Version 3** e-Loop

1. Place the Loop into radio awake state by aligning the magnet on the diagnostic remote with the **CODE** recess.
2. Once the yellow **CODE** LED flashes, remove the magnet.
3. The yellow LED should now come on solid indicating the loop is ready for connection..
4. Now press the **CONNECT** button. If pairing is successful, **Pair Success** will display and if not successful, the screen will display **Timeout**, press **CONNECT** again to try again.


NOTE: Magnet fitted on all Diagnostic Remotes manufactured from 01/01/2024



Altering the e-Loop settings

NOTE: You will need to be connected to the e-Loop to make any alterations to settings. (Refer to Connecting to an e-Loop section above).

1. After making connection scroll to **Alter Settings**.
2. The first selection is **Mode** – EL00C and EL0IC are preset to EXIT mode and cannot be changed. EL00C-RAD and EL0IC-RAD are preset to Presence mode and can be changed to EXIT mode if required. To change mode press **SET**, now use the Up or Down buttons to alter and **SET** to confirm. If no further changes need to be made, press the **UPLOAD** button to upload the new settings. Once upload is complete, the screen will display **Settings Applied**.
3. Second selection is **Trip Value**; the default is 800 which is the most sensitive. To change value press **SET** to highlight the setting value and use the Up or Down arrow buttons to increase or decrease value.
4. After the value has been altered press the **SET** button again. If no further changes need to be made, press the **UPLOAD** button to upload the new settings. Once upload is complete, the screen will display **Settings Applied**.
5. To disconnect press the **CONNECT** button.

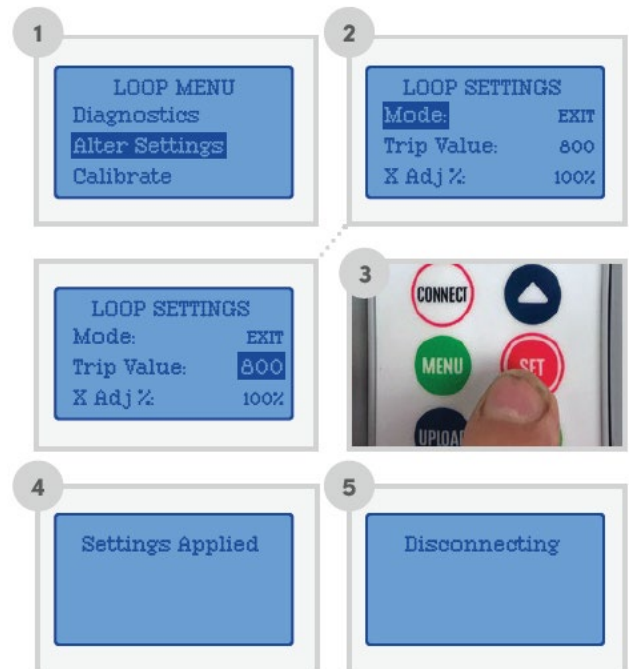

Altering XYZ axis

NOTE: We only recommend altering the XYZ axis for complex sites where you need less activation from a particular direction, such as the exit road being in close proximity to an entry road. In this instance we would reduce the X field direction so that a passing vehicle in next lane will not trigger the e-Loop.

Z = Vertical detection


Y = Approach and Depart detection (Arrow indication)

X = Left and Right-hand side detection

1. First, make a connection to the e-Loop, then go to **MENU** and select **Alter Settings** and press **SET**. Now scroll to the Axis you want to change, then press **SET** again.
2. If we are changing the **X** axis, you can set a value between 0% to 200% – this is the same for all X, Y and Z axis.
3. Use the Up or Down arrow buttons to change the value, then press the **SET** button to confirm.

NOTE: All values should add up to a minimum of 300, so if reducing one axis then another should be increased to compensate.

4. Now press **UPLOAD** to confirm the new settings and the screen will display Sending Settings. Then press the **CONNECT** button to disconnect the e-Loop, or **MENU** button to access other options.

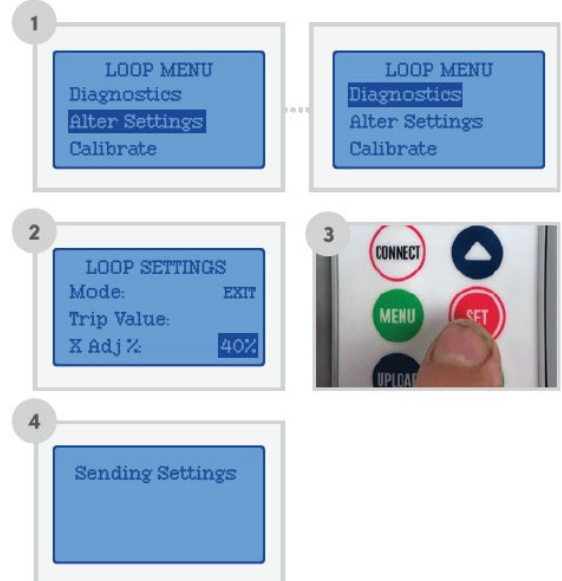


Calibrating the e-Loop using the diagnostic remote

1. Make a connection to the e-Loop, then press **MENU** and select **Calibrate**. The Calibrate menu screen will have **Calibrate Loop** highlighted. Now press **SET** to calibrate the e-Loop and the screen will display **Calibrating Loop**.
2. To uncalibrated, the e-Loop enter the **Calibrate** menu and scroll down to select **Uncalibrate Loop**. Now press the **SET** button, and the e-Loop is uncalibrated.

Radar Read

1. Press **SET** to read the radar sensor state. If **False** is shown it means no object is detected. If **True** is displayed this means an object has been detected.

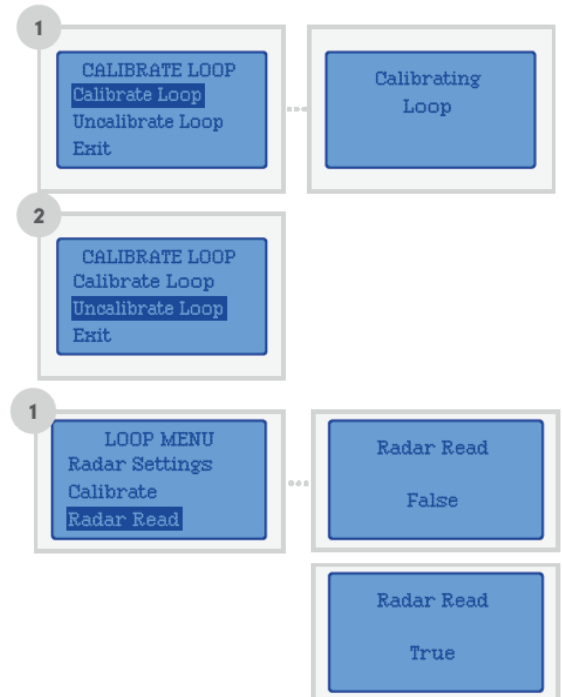

Changing Radar settings

NOTE: Only available for EL00C-RAD and EL0IC-RAD versions.
Please contact the technical department before altering any radar settings, doing so may cause the e-Loop to be unreliable.


1. After making connection, scroll to **Radar Settings** and press the **SET** button.
2. To change any of these settings, navigate to the desired option using the **UP** and **DOWN** buttons, and press the **SET** button to select option. Again, use the **UP** and **DOWN** buttons to change the setting and press **SET** to confirm.
3. Once all changes have been made, press the **UPLOAD** button to upload the new settings to the e-Loop. If successful **Setting Applied** will display, if not it may display **Connection Fail** – if this occurs, try again.

Radar settings:

1. The first setting is **Release Trip** – this is what the magnetic field value needs to drop below to trigger the radar to take a reading which verifies the vehicle is no longer present. 300 is the default setting and should not be changed before contacting the technical department.
2. The second setting is **Start Lens** – this is the distance the radar will start detecting. 200 is the default setting and should not be changed before contacting the technical department.
3. The third setting is **Measure Lens** – this is the maximum distance the radar will detect a vehicle. This can be adjusted depending on the types of vehicles being used and the location of the e-Loop.


NOTE: Lowering the range for an undercover car park where no trucks can enter can extend battery life. Extending range for a trucking depo may be needed for high trailer detection.

4. The fourth option is **Radar Trip** – this is used to adjust the sensitivity of the radar. The higher the number, the less sensitive it will be. 500 is the default setting and should not be changed before consulting the technical department.
5. The fifth option is **Radar Confirm** – the default is OFF when turned on. The sensor will detect the vehicle with magnetic field detection and will then confirm with radar before sending Open command.

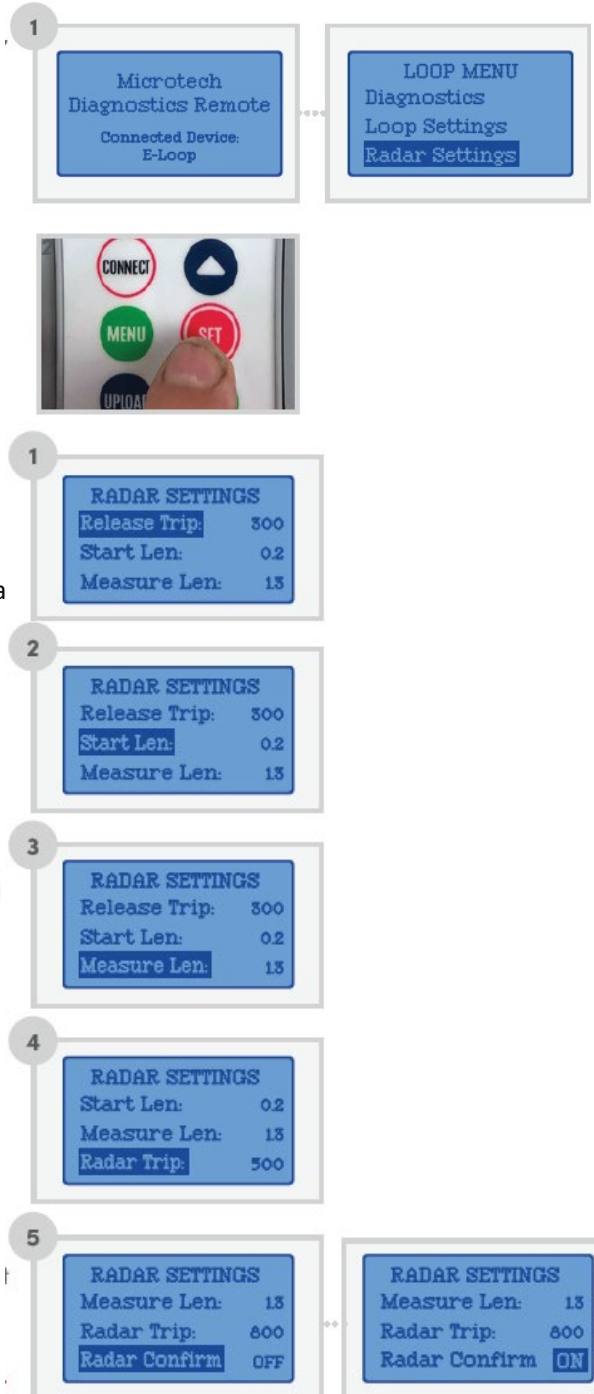


- The sixth option is **Radar INT** - this is used to adjust the time between radar reads when in presence mode. The default value is 60 seconds and can be adjusted from 15 to 180 seconds.

Press **SET** to alter. Use **Up** or **Down** buttons to change and **SET** to confirm. If no further changes need to be made, press the **UPLOAD** button to upload the new settings. Once upload is complete, the screen will display **Settings Applied**.

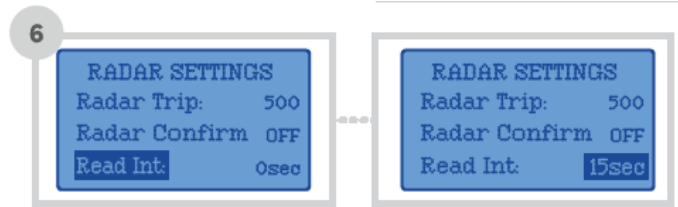

Batteries

In order to replace the two AAA batteries, first remove the three screws on the back of the device. Then remove the plate and replace the two batteries. Then reinstall the plate and screws.

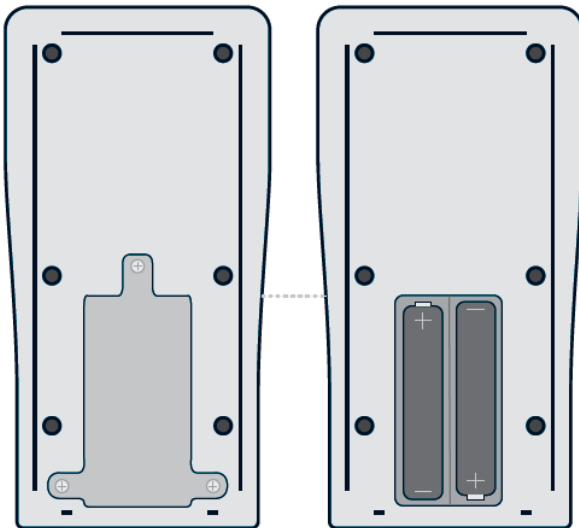

Disposal

The packaging must be disposed of in the local recyclable containers. According to the European Directive 2002/96/EC on waste electrical equipment, this device must be properly disposed of, after usage in order to ensure a recycling of the materials used. Old accumulators and batteries may not be disposed of in the household waste, since they contain pollutants and must be properly disposed of in municipal collection points or in the containers of the dealer provided. Country-specific regulations must be observed.

Parking Mode

Parking mode feature has now been added. This conserves battery life when a vehicle is present over the e-Loop for long periods of time, such as when used in loading docks or waiting bays and can be found in the Loop Settings menu. (NOTE: Only available with Radar e-Loops).


Advanced Radar settings

Altering these settings can be used to speed up the release of the relay when a vehicle departs. You can adjust the time it takes to read the radar when the magnetic settings have dropped below 300 from 1 to 15 seconds.

To further speed up the release go to the **Settings** menu and change the reaction from 'slow', which is default for presence mode e-Loops, to 'fast', which is default for exit mode e-Loops. This will allow the magnetic field to drop much faster, allowing for a radar read sooner, to give you a quicker release.

Device Info

This will display software version and software build date.

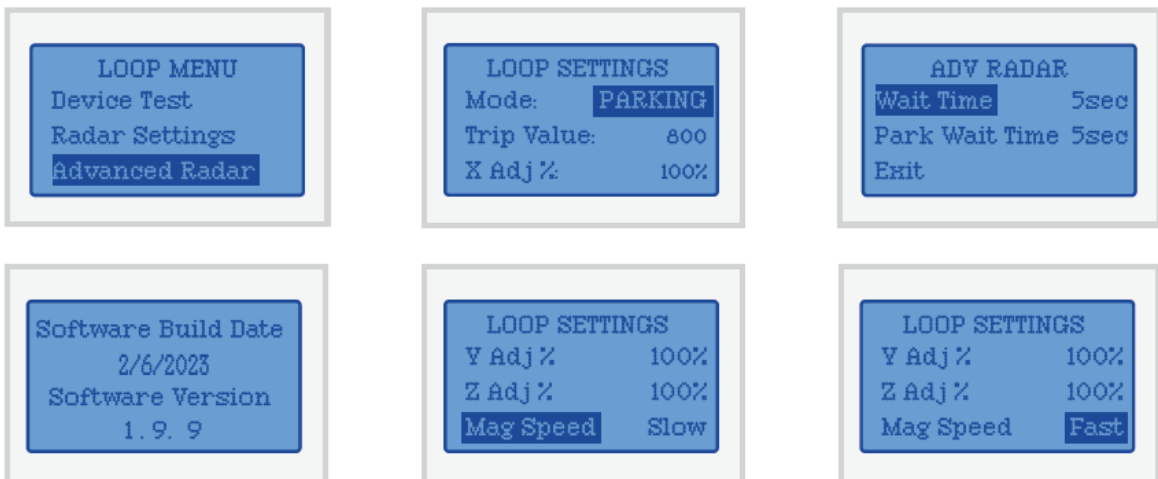


Document updated: 27.02.25



AES Global Ltd - 4 Kilcronagh Business Park, Cookstown, BT80 9HJ, UK.
Product Type: Wireless Vehicle Detection & Automation.

Hereby, AES GLOBAL LTD declares that the radio equipment type e-Diagnostic is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address: www.aesglobalonline.com/e-loop#ce

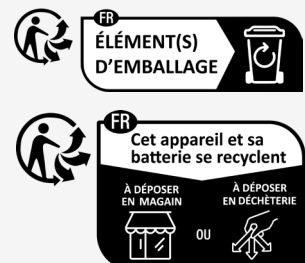

Points de collecte sur www.quefairedemesdechets.fr