

ELECTROMAGNETIC GATE LOCK INSTALLATION INSTRUCTIONS


※Model:

GL-200 waterproof gate lock

※Feature:

- Threaded conduit fitting
- Stainless Steel Case
- Built-in lock status sensor
- Suitable for outdoor
- Waterproof


※Specifications:

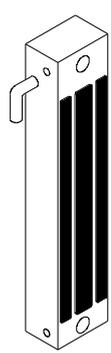

GL-200




GL-200P

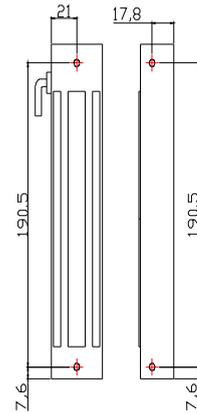


	GL-200	Note
Power supply	DC-12V / DC-24V	Switchable
Operation current	450mA/12VDC 235 mA/24VDC	
Lock status sensor	N.C. Output (0.25A/30VDC)	Reed switch
Holding force	600lbs(250kg)	
Operation temperature	-10°C ~ 70°C	
Warranty	1 year	
Weight	2.3kg	
Sealing protection	IP 67	
Body Dimensions	210 L (P:226) X 42 W X 28.5 D (mm)	
Armature Dimensions	185 L X 38 W X 12 D (mm)	
Casing	Stainless Steel	

Please read before installing
Specific mounting brackets may be
necessary to fit different types of gate.

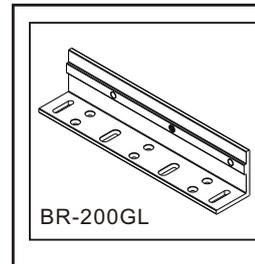


BR-200GL

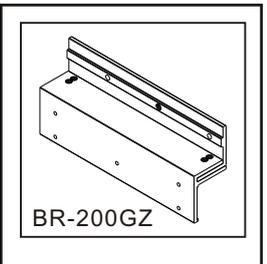

BR-200GZ

※Accessories diagram:

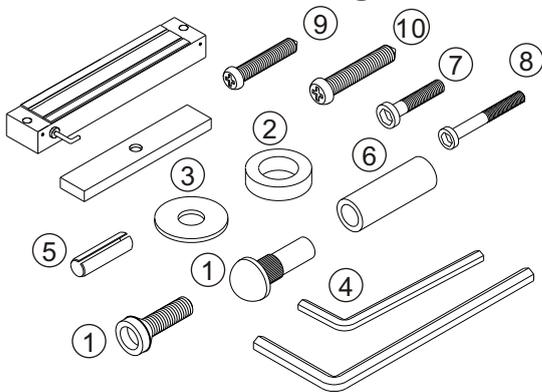

Accessories:

Type	Quantity	Model Type	GL-200	
1	Sexnut Bolt		1	
2	Rubber Washer		2	
3	Washer		3	
4	Allenkey		2	
5	Guide pins		2	
6	Door spacer		1	
7	Mounting screw		2	M4x30mm
8	Mounting screw		2	M4x40mm
9	Mounting screw		2	M4x35mm
10	Mounting screw		2	M4x50mm

Installation

A. Determine the type of gate (refer to Fig 1 & Fig 2 & Fig 3)

Please make sure type of gate (please refer to fig. 2 & fig 3) to ensure the type of brackets required to install.

B. Prepare the gate post for mounting the gate lock and armature

Determine the desired location for mounting the gate lock and armature on the gate post. Make sure there is space for wiring.

C. Mount the lock body

D. Mount the armature

If you are mounting the armature directly to the gate. You can refer to the fig 5 for drilling the armature mounting screw hole.

E. Verify proper alignment

Close the gate and verify the lock face and armature are making full contact of the entire armature length. Adjustments may be needed.

F. Connect the wires


Refer to Connection Diagram and Monitor Output for wiring.

G. Test the unit.

H. Insert the tamper caps into the mounting screw access holes of the lock body.

This should be the last step of the installation, as once the tamper caps are in place, it is difficult to remove.


※Installation diagram

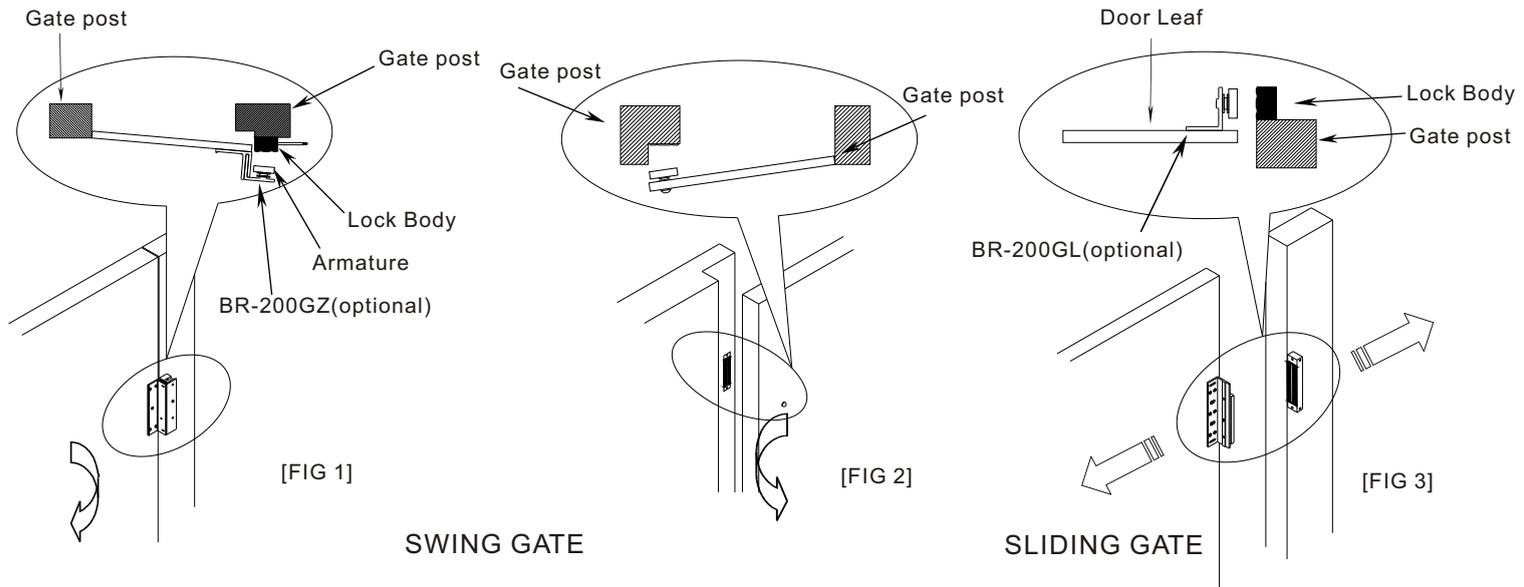

SWING GATE




SLIDING GATE

※Armature installations

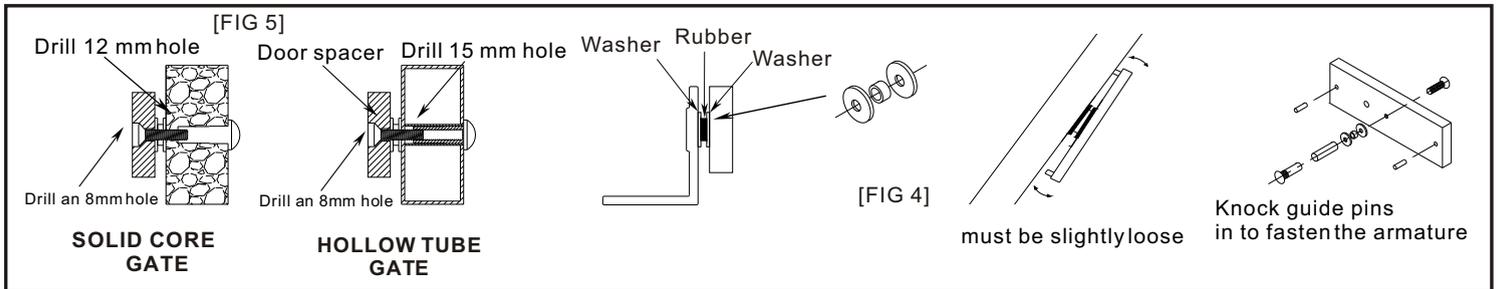

※Connection Diagram and Monitor Output

※Monitor Output

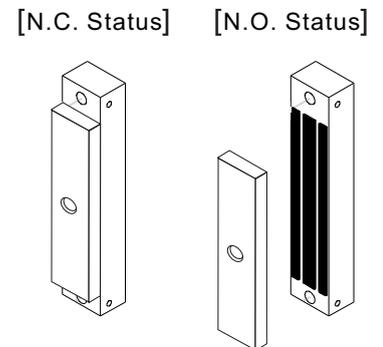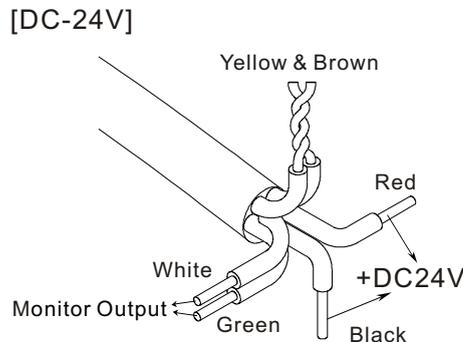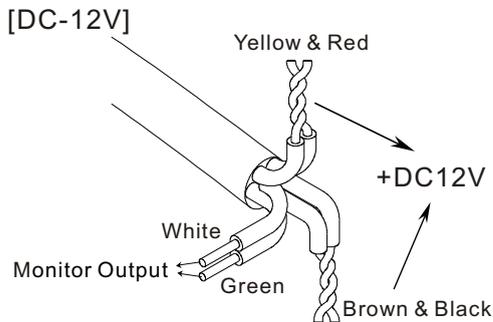

*Monitor output, contact rating (0.25A/30VDC)

*When magnetic lock and armature are engaged, the monitor output will change to N.C. Status.

Problem:	Possible cause:	Solutions:
Door does not lock	No power.	<ul style="list-style-type: none"> Check the input voltage at the EM-lock. If the voltage is zero or a low reading, double check all wire connections.
	Incorrect wiring.	<ul style="list-style-type: none"> Refer to Connection Diagram and monitor output.
Low holding force	Lock body and armature plate did not contact properly.	<ul style="list-style-type: none"> Make sure the lock body and armature plate are properly aligned. Make sure the contact surfaces of the lock body and armature plate are clean and free from rust.
	Incorrect voltage setting	<ul style="list-style-type: none"> Check the power adapter with a meter, and make sure the wiring is connected correctly (DC12V/24V).
	AC voltage supply.	<ul style="list-style-type: none"> EM-lock requires DC input voltage. When an AC transformer is used, a bridge rectifier must be installed to convert the AC output of the transformer to DC output.